

USER MANUAL
eMINI REMOTE CONTROL
(REF.: eMINI)



elebia®
smart lifting solutions



elebia®

eMINI Remote Control


- The eMINI is a small and compact remote control.
- It can be integrated into a glove or used with a wristband to wear it as a watch.
- With the eMINI remote control, the operator can open and close the evo automatic hook, the C5 lifting clamp(s) and/or NEO lifting hooks and control their battery level.
- The eMINI also informs of the product's annual inspection and displays sensor information and maintenance messages.
- The eMINI is a small but powerful remote control, compatible with all cranes and other remotes.

Display

| "Mode" Button

| Display information

| "elebia" Button

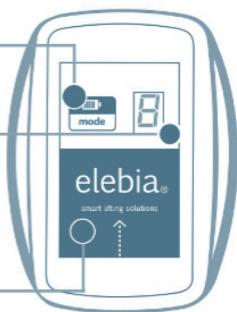

Display information

- 0 to 9: Battery level of the lifting hook
- A: Low battery level of the eMINI remote control
- C: Maintenance review of the lifting hook
- 1b: "One button" mode
- 2b: "Two buttons" mode
- b: The eMINI remote control does not detect the lifting hook

- battery is not inserted
- battery is off
- battery is discharged

Working modes

The eMINI remote control can work in 4 different modes:

> **“One button” mode: (b1)**

“elebia” button: locks and unlocks the lifting hook.

> **“Two buttons” mode: (b2)**

“elebia” button: locks the lifting hook.

“Mode” button: unlocks the lifting hook.

> **“One button” SAFE mode: (b3)**

Press the “elebia” button, then the “Mode” button and then the “elebia” button.

> **“Two buttons” SAFE mode: (b4)**

“elebia” button: locks the lifting hook.

(must quickly press the button twice)

“Mode” button: unlocks the lifting hook.

(must quickly press the button twice)

To switch between modes, press and hold the “elebia” button for 10 seconds

How to link the eMINI remote control with the evo automatic hook / C5 lifting clamp / NEO lifting hook

Before linking the eMINI remote control to the lifting hook, make sure it is set in one button mode (1b mode).

- Insert battery into the lifting hook.
- Turn off the battery.
- Press and hold the “rigger” button.
(the button which opens and closes the lifting hook)
- While pressing the “rigger” button, power on the battery.
(you will hear a fast “beep” from the lifting hook)
- Release the “rigger” button.
(release must take place before hearing a long “beep”)
- On the remote control, click the “mode” button.
(if you want to add more remotes, click the “mode” button on each remote)
- You will hear a “beep” for each link created.
- Wait until you hear a new “beep”. *(after a few seconds)*
- Test if link has been created.

Technical Specifications

Power Supply	One 3V lithium battery (CR2032)
Available Code Combinations	65,536 different combinations
Detection of Errors in Transmission	2 CRC bytes + Forward Error Correction
Buttons	2
Frequency Selection	1
Frequencies	868MHz / 915MHz
Communication	Bi-directional return of receiver battery status
Radiated Power	Under 5 dBm
Antenna	Printed circuit
Range	100 metres / 330 Feet
Working Temperature	-20 °C to 85 °C / -4 °F to 185 °F
Dimensions	Minitel box (68 x 52 x 17 mm. / 2.68 x 2.05 x 0.67 in.)

Plaça Pere Llauger Prim, Naus 10-11
Polígon Industrial Can Misser
08360 Canet de Mar (Barcelona) Spain
Tel. (+34) 93 543 4706

www.elebia.com
info@elebia.com

elebia®
smart lifting solutions

