

TD V121-004-CA (en)

Part No.: V121-004

Name: VCP XL

Weight: 30.2 lbs

Standard: EN 13374-A; COHS; OSHA;
ANSI/ASSE

Regulation: OHSA (CAN); OSHA (USA)



Material: Galvanised Steel

Dimensions: imperial [metric]



This Technical Document must always be used in conjunction with **HAKI's General Qualifications** -See below

1. Always plan your work and installation
2. Always select the right equipment
3. Always regularly inspect your system








Min. 11'-3¹³/₁₆" [3450]
Max. 14'-11¹/₈" [4550]

Manufactured Date

www.HAKI.com


TD V121-004-CA (en)

1.

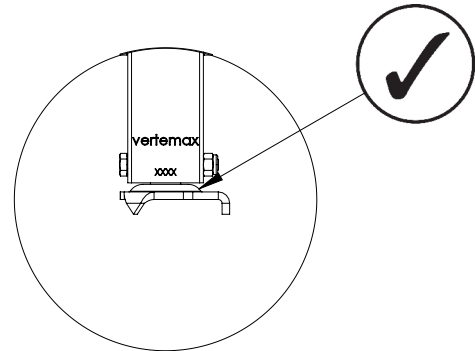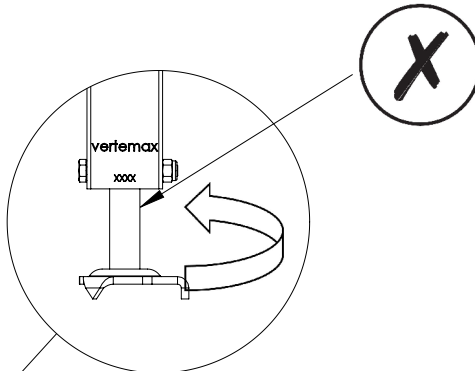



Turn the bottom foot clockwise until it is fully retracted as shown above.

2.





Press the button in the middle of the compression post and retract the top section of the compression post.

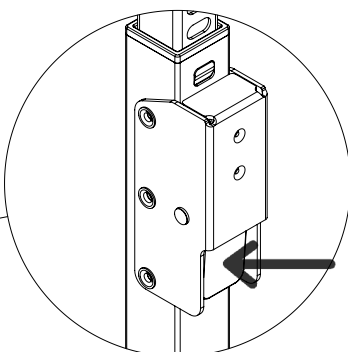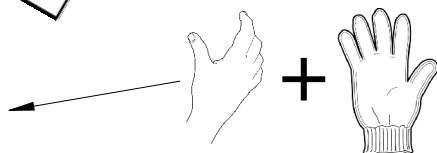

PRESS


3.

Ensure the compression post is retracted sufficiently to allow it to stand upright between the ceiling slab and floor slab.




www.HAKI.com



4.



Position the compression post vertically between the ceiling and floor slabs.



5.

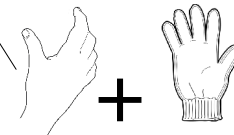

Extend the top section of the compression post until it contacts the ceiling slab.

Ensure the compression post is upright using a level.





6.

0 kN




Turn the compression post clockwise to apply load from the compression post to the ceiling and floor slabs.

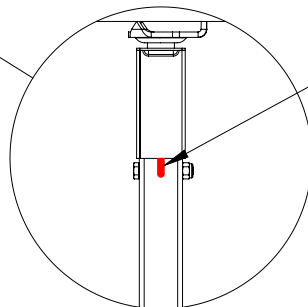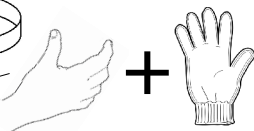

7.


3 kN

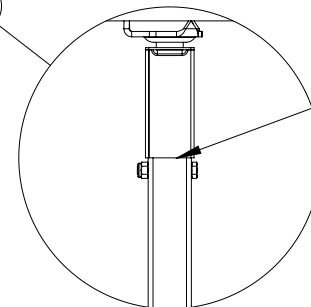



IMPORTANT
Compression Post is only correctly under load when red line is hidden.




www.HAKI.com

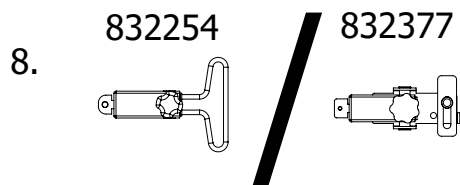

9.

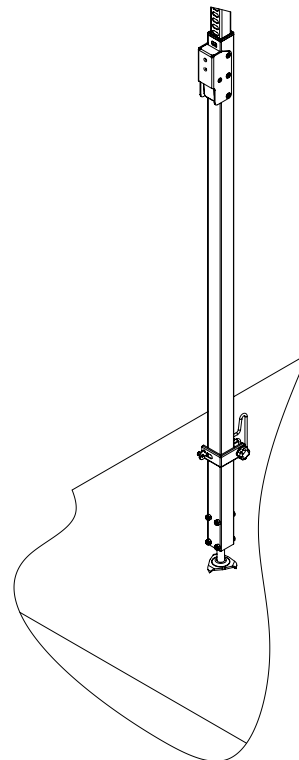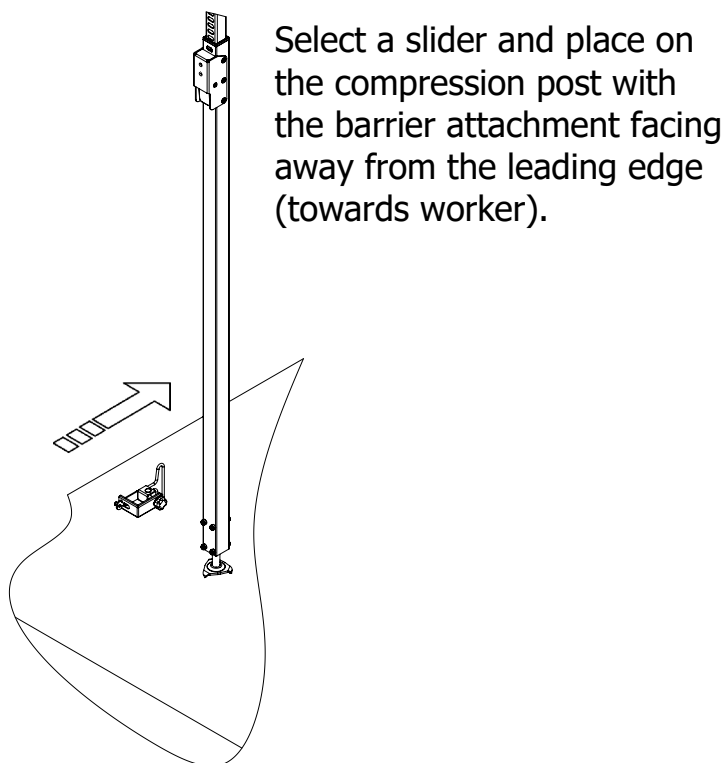


10.

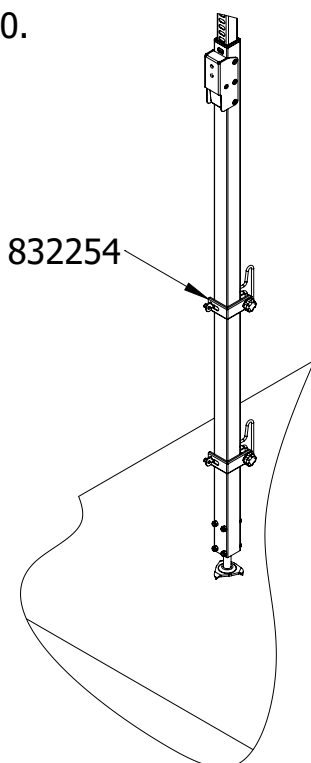


11.

Attach a second slider to the compression post at around 900mm from the floor. Ensure the barrier attachment is facing away from the leading edge (towards worker).

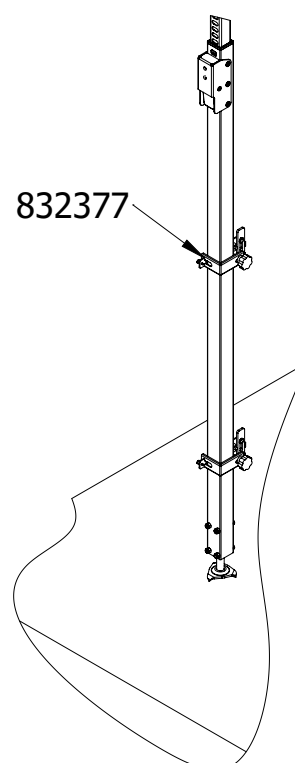


12.

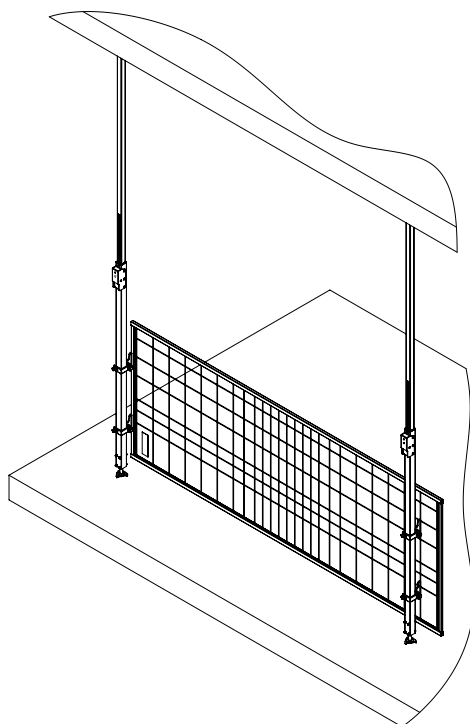


13.

Position barrier against compression posts and secure it using the sliders.


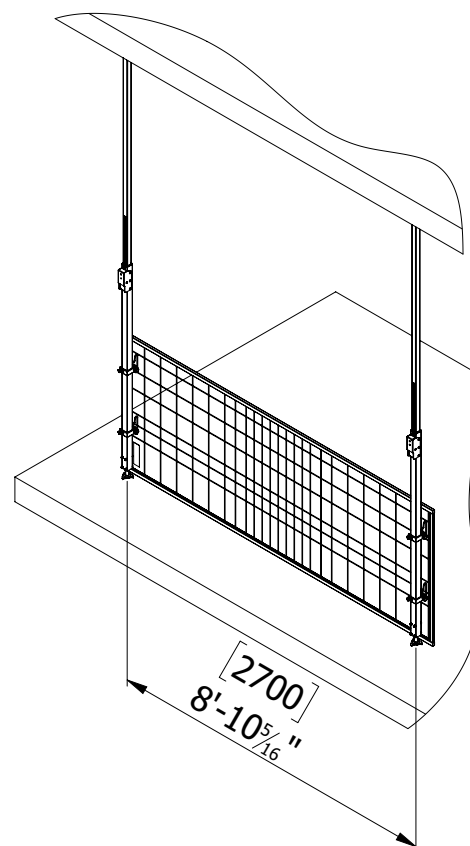


14.

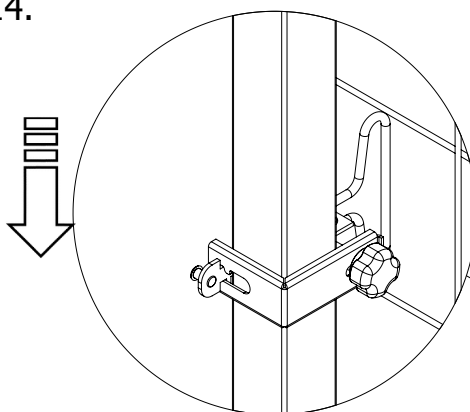

15.

Move the slider down to hook around the wire mesh of the barrier.

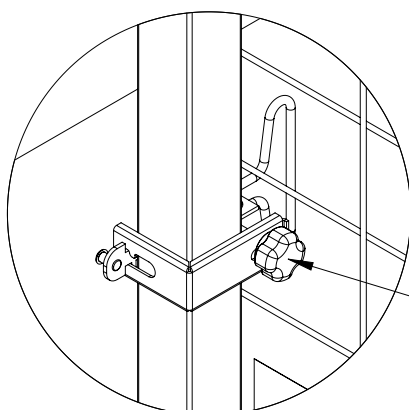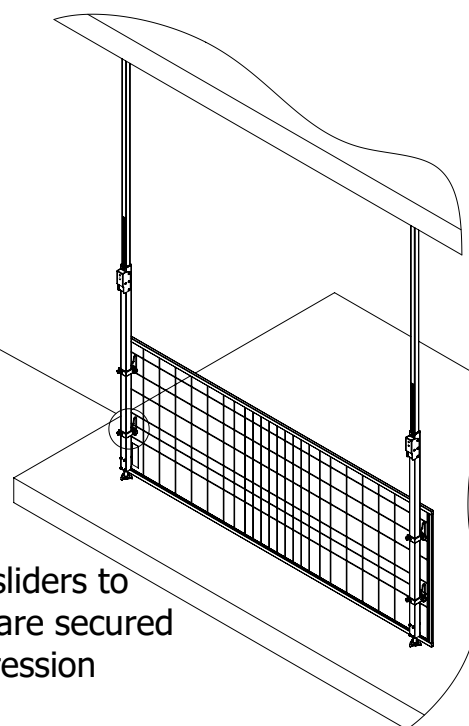

Tighten the sliders to ensure they are secured to the compression posts.

www.HAKI.com

TD V121-004-CA (en)


Province/State	Loading F*
Ontario British Columbia New Brunswick Alberta PEI Saskatchewan	759.4 N
USA Quebec Manitoba Newfoundland Nova Scotia	1012.5 N

*Based on 2.7m C/C ($675\text{N} + 12.5\% = 759.4$)

($900\text{N} + 12.5\% = 1012.5$)


**Unfactored applied load

17.

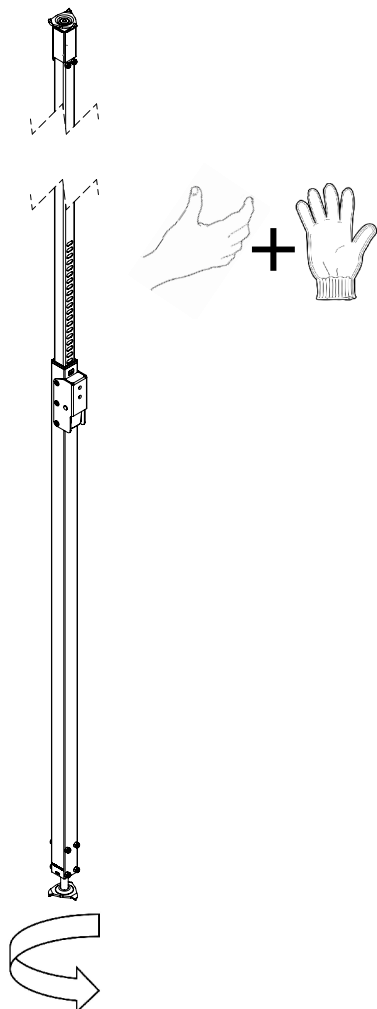


Min. x 2

18.

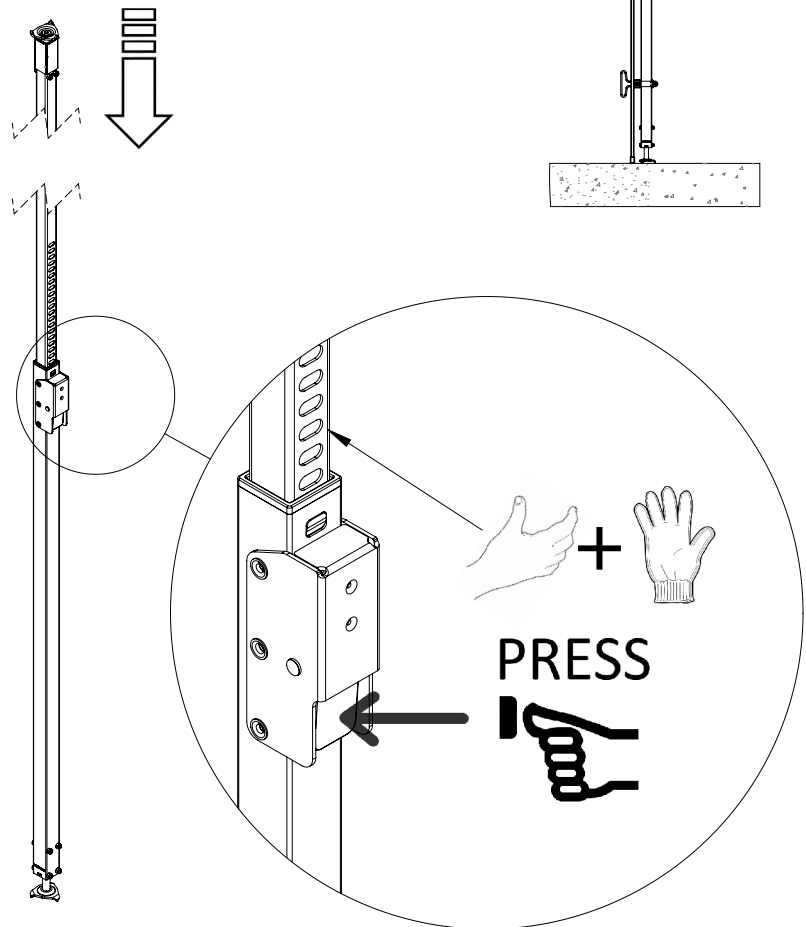

www.HAKI.com

16.

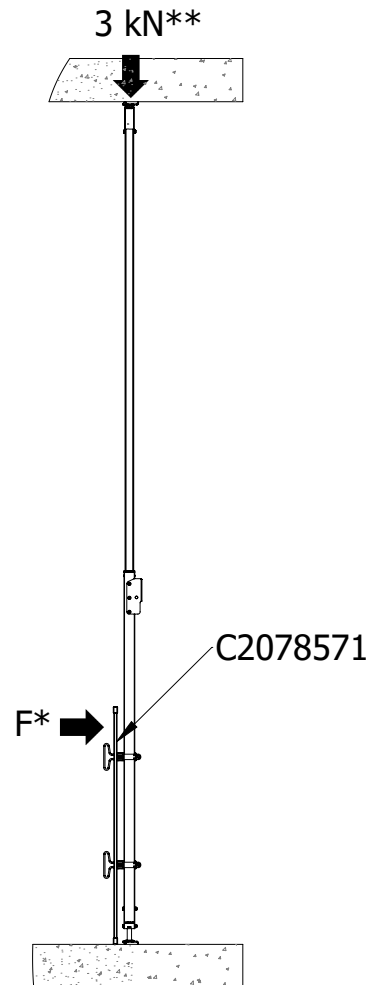















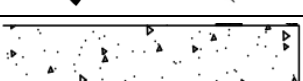


General Qualifications

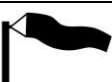

These General Qualifications are applicable to HAKI products and must always be read in conjunction with each products Technical Documentation (TD).

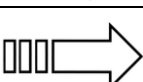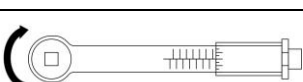General
<ul style="list-style-type: none">• Always check general product condition before use• If in doubt always ask by contacting a representative of <u>HAKI</u>• Reject any damaged or rusty components• <u>HAKI</u> products and systems provide temporary protection during construction activity.• <u>HAKI</u> products are NOT tested or intended:<ul style="list-style-type: none">- to withstand impact by any vehicle,- to support or provide control of the public,- for the containment of bulk materials.
Always plan your works
<ul style="list-style-type: none">• Take note of location, proximity to permanent and temporary hazard structures.• Take note of dimensions, layout and access areas.• Always identify both the fall hazard for the installer and the falling materials hazard for persons and property below.• These identified hazards should also be considered on dismantling.• <u>HAKI</u> strongly recommends seeking competent Work at Height advice if in any doubt about the installer's or other's safety.• Note the component weight as given on the TD sheets and ensure suitable handling equipment is available.• Ensure local site Risk Assessment / Method Statement detail is observed and followed.

Fixing selection
<ul style="list-style-type: none"> • All fixings should be confirmed as suitable for the chosen application site. • Material type and thickness, edge proximity, depth of embedment, and proximity to other fixings, all impact the strength of a fixing. Please refer to manufacturer's instructions for fixing guidance and limitation. • The dimensions for installation and the load capacity should be confirmed by the fixing manufacturer for each application. • Competent fixings advice should be sought if in any doubt.
Fine mesh containment
<ul style="list-style-type: none"> • Note that the addition of any fine containment mesh (such as on barriers or safety nets) increases the wind load attracted to the supports. • Technical advice must be sought before any such addition.
Weather
<ul style="list-style-type: none"> • HAKI products and systems can be adversely impacted by significant wind speeds. Please note limitations on product TD and take any recommended remedial action. If in doubt, contact a HAKI representative. • If in doubt, cease work, and use additional protection measures as required. • All safety systems should be kept clear of ice and snow.
Inspection
<ul style="list-style-type: none"> • All installed systems should be checked at least once every 7 days by a competent person, to ensure its continued integrity and that there are no signs of any potential failing. • We recommend that these checks are recorded in a site log. • Please ensure any defective product identified during inspection is replaced immediately.
Loading
<ul style="list-style-type: none"> • Any HAKI products subjected to loading, or used in anger, should be assessed to ensure it continues to provide the necessary protection. If this involves removing from service you must ensure the area is otherwise protected. • The system should then be fully inspected, any components replaced as necessary, and the installation confirmed as fit for continued use by a competent person.
Storage
<ul style="list-style-type: none"> • HAKI recommends the use of its own storage and transit solutions. • Take careful note of lifting and loading limits. • All components should be stored in a manner that limits any detrimental environmental effect due to weather or corrosive substances.
Traceability
<ul style="list-style-type: none"> • All HAKI products are traceable.

Key		
	Symbol	Meaning
1.		Always check / Always confirm
2.		Fall Hazard
3.		Do this
4		Don't do this
5		Be Aware
6		Moment Load
7		Max Wind Load
8		Insert
9		Movement / Rotation
10		Movement
11		Torque Spanner and settings
12		Tighten
13		Untighten
14		Tighten by hand
15		Concrete slab/floor/wall
16.		Shear Load
17.		Tensile Load